


These are the CPU jumper settings for the Watchguard Firebox II

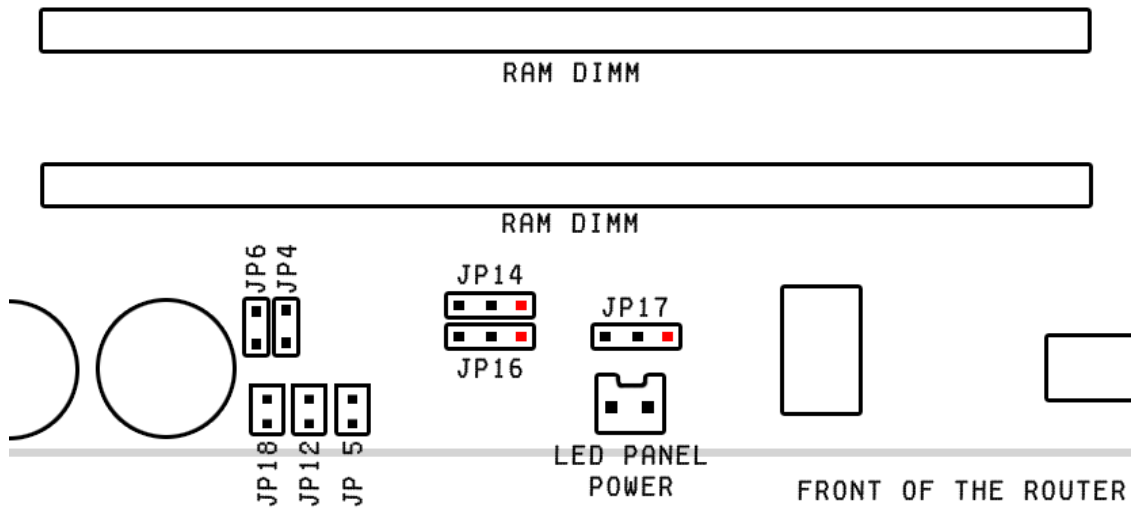

Jumper Settings			CPU Speed
14	16	17	MHz
2-3	1-2	2-3	133
?	?	?	166
OPEN	OPEN	1-2	200
OPEN	OPEN	2-3	233
1-2	1-2	2-3	266
1-2	1-2	1-2	300
1-2	2-3	1-2	333
1-2	2-3	2-3	366
OPEN	1-2	OPEN	400

\*The red dot indicates PIN 1

Voltage		
JP18	2.8v	Intel MMX
JP12	2.2v	AMD K6-2
JP5	?	?

For the voltage settings, only one jumper at the time is installed